

TO TIGHTEN THE BUNGEE CORD INSIDE A FOLDING CANE

Sometimes the elastic bungee cord inside a folding cane may be too slack to hold the cane firmly together. However, the bungee cord can be made more taught through the addition of another knot to the bungee cord.

1. Unfold cane
2. Remove ferrule




3. Separate lowest section of cane from the next section, holding the internal bungee cord firmly.




4. Feed bungee cord through the section from top to bottom so that the ends of the bungee cord appear through the bottom end of the section.



5. Take a firm hold of the ends of the bungee cord.

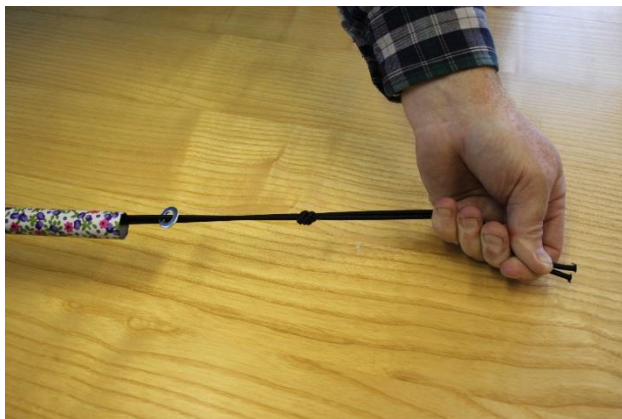

6. Tie a knot between the existing knot and the washer.

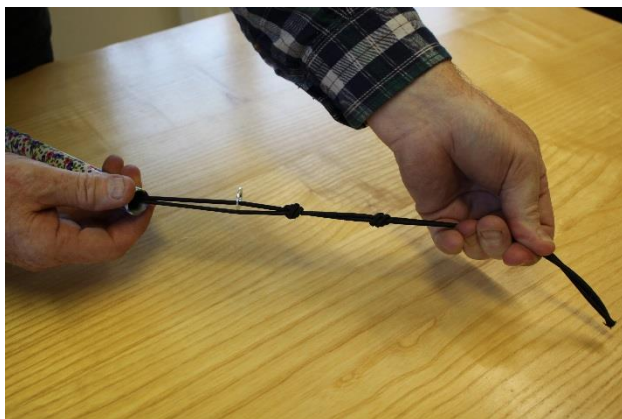

7. Carefully release the bungee cord back into the cane.
8. Replace ferrule.



NB. The other end of the bungee cord is held in place at the top of the section that is inserted into the handle section. If, during the bungee tightening process, you inadvertently disconnect the top end of the bungee cord, take care not to lose the small metal bar. There are two types of metal bar: straight (see below: in cane on left) and U-shaped (in cane on right). This photograph shows how the top end of the bungee cord should look when correctly fitted.



If you have any queries, please contact our customer service department on Tel +44 (0)1460 75686 or email customerservices@classiccanes.co.uk .